

Sky+ HD Remote Codes

The Sky+ HD Remote Control works with all the latest Sky HD Digital Receivers.

The really great feature of the Sky Remote Control is that you can programme it to work with both your Sky+ HD Receiver and television. The advantage is that you can change channel on the Skybox and adjust the volume on the TV with the same remote. To do this is fairly simple and the same rules apply for standard, sky+ and sky+ HD remotes.

TV Codes

This works because every TV manufacturer has a unique code (or series of codes) allocated to its TV by programming that code into the sky remote. The remote can recognise which TV it is trying to operate and these settings can be saved into the remote. The reason it is so important to change the batteries in a remote quickly is because once the batteries go completely dead the remote will lose its settings and may need to be reprogrammed to operate the TV again.

How To Tune a Sky Remote to your TV

The most common way to programme a Sky+ HD Remote Control to work your TV is to use the 4-Digit brand code allocated to that TV manufacturer. This is the code that appears in your Sky Hand book. The alternative is to use the direct code, which is assigned to each TV brand by the manufacturer.

See the procedure given below.



Standby Button

TV Button

TV Guide Button

Select Button

Red Button

Option A – Using 4-Digit Brand code (Default)

1. Look up the 4-Digit Code for your brand of TV in the ‘Table of TV codes’ below.
2. Turn on your TV and Skybox.
3. Press ‘TV’ on your Sky Remote.
4. Hold down the ‘Select’ & ‘red’ buttons together till the red LED on your remote blinks twice.
5. Press ‘TV’ on your Sky Remote and enter the 4-Digit Code for your TV brand.
6. The light on the remote should blink twice.
7. Press the ‘Standby’ button on your remote.
8. If your TV switches off, press ‘Select’ to save the setting in your remote.
9. If the TV does not switch off, press ‘TV’ and then press ‘Standby’, repeating until the TV switches off and then press ‘Select’ to save.
10. Switch your TV back on and press the ‘TV Guide’ button – if it brings up the TV Guide list on your TV screen, the programming is successful.

Option B – Using 3-Digit Direct Code as an alternative

1. Look up the 3-Digit Direct Code for your TV brand in the ‘Table of TV Codes’ below.
2. Switch on your TV and Skybox.
3. Press ‘TV’ on your Sky Remote.
4. Hold down the ‘Select’ and ‘Red’ buttons together till the red LED on your remote blinks twice.
5. Enter the 3-Digit Direct Code.
6. The light on the remote should blink twice.
7. If it only blinks once, go to step 1 and repeat for the next number.
8. Press the ‘Standby’ button on your remote.
9. If the TV switches off, press ‘Select’ to save the setting in your remote.
10. Switch your TV back on and press the ‘TV Guide’ button – if it brings up the TV Guide list on your TV screen, the programming is successful.

If you followed the steps correctly, but it did not work, try this

1. Check if you entered the right code for your TV.
2. Did you go through all the possible codes for that TV?
3. The list below does not include my make of TV
4. Try a Google Search for the TV brand with the keywords “tv code”.
5. If your TV is very new or is not a well-known brand, then the codes for the TV may not yet be part of Sky’s Remote Control software and it may not be possible.
6. If you are using a generic (unofficial) Sky Remote – the TV codes are often different.

Table of TV Codes For Programming a sky Remote

Below we have listed 2 tables to assist you to tune the Sky Remote to operate your TV:

- Table of most common Brand Codes from Sky Manual
- Comprehensive list of Brand & Direct codes

The Most Common Sky Remote Codes

Aiwa	0406	Memorex	0037
Akai	0098	Metz	0491
Akura	0042	Minoka	0921
Alba	0043	Mitsubishi	0150
Amstrad	0063	NEI	0514
Baird	0117	Nikkai	0528
Bang & Olufsen	0118	Nokia	0536
BPL	0115	Nordmende	0537
Beko	0125	Orion	0549
Beon	0899	Panasonic	0051
Brionvega	0147	Philips	0081
Bush	0157	Pioneer	0166
Crown	0225	Protech	0595
Daewoo	0029	Pye	0600
Decca	0244	Roadstar	0625
Dual	0257	Saba	0645
Ferguson	0293	Saisho	0649
Fidelity	0294	Salora	0651
Finlandia	0296	Samsung	0060
Finilux	0297	Sanyo	0159
Fisher	0154	Schneider	0665
Funai	0179	Seleco	0672
Genexxa	0030	Sharp	0093
Goldstar	0056	Siemens	0680
Goodmans	0335	Sony	0000
Granada	0340	Soundwave	0702
Grundig	0345	Tandy	0741
Harwood	0361	Tatung	0049
Hinari	0365	Technics	0250
Hitachi	0145	Telefunken	0757
ITT	0384	Thomson	0771
JVC	0053	Thorn	0772
Loewe	0442	Thorn-Ferguson	0936
Matusi	0477	Toshiba	0156

Comprehensive Sky Remote Codes List

Brand	Brand Code	Direct Code
Acura	0891	009
Admiral	0182	115,191,241
Adyson	0035	245
AGB	0010	544
Aiko	0038	297
Akai	0098	389,236,544,065,508,219
Akito	0892	300
Akura	0042	246,292,397,065,440
Alba	0043	037,065,246,399,263,064,446
Allorgan	0050	322
Amplivision	0062	245,428
Amstrad	0063	205,440,065,399,382,037,199,461,544,390,397,050
Anitech	0070	037,096,104
Arcam	0077	243,244,245
ArcEnCiel	0894	596
ASA	0014	098,132,115
Asberg	0895	104
Asuka	0094	246
Atlantic	0896	234
Audiosonic	0103	065,137
Autovox	0108	104,115,234,364,572
Baird	0117	137,221,371,218,220,236,100
Bang & Olufsen	0118	593,115,114
Bareo	0119	444
BasicLine	0121	037,246
Baur	0122	331,563,540,582,389,572,533,038,065
Beko	0125	514,398
Beon	0899	065,060,446
Binatone	0131	245
Blaupunkt	0133	582,563,219,223,228,241,329,355,356,346
Blue Sky	0134	246
Blue Star	0136	310
Bondstec	0138	275
Boots	0139	300,245,060
BPL	0115	310,065
Brandt	0143	233,361,224,226,315,363,327,596,137
Brandt Electronic	0900	596
Brionvega	0147	115
Britannia	0149	244
Bruns	0152	115
BSR	0116	322
BTC	0898	246
Bush	0157	246,263,377,037,064,065,310,300,383,399,391,402,339,547,292,239,389
Carrefour	0189	064
Cascade	0902	037,065
Cathay	0903	065
Centurion	0904	065
Century	0197	115,241,275

CGE	0162	102,112,334,104,275,280,446,398
Cimline	0202	037
Clarivox	0905	065
Clatronic	0205	246,292,398,399,245,104,275,065,446,398
Clayton	0206	413
Condor	0218	348,398
Contec	0222	244,037,185,039,064
Continental Edison	0223	137,224,226,427,361,515,596
Crosley	0074	115,275,102,112,280,104,191,241
Crown	0225	037,398,514,104,449,065,397,387,607,446
Crystal	0906	459
CS Electronics	0163	244
CTC	0901	275
Cybertron	0228	246
Daewoo	0092	037,065,402,244,402,527,245,246
Dainichi	0237	244,246,243
Dansai	0238	065,244,060
Dayton	0241	037
Decca	0244	065,100,544,300,277,245,272,077
DeGraaf	0243	236,255,391,576,072
Dixi	0254	037,065
Dual	0257	572,547,380,364
DualTec	0907	245
Dumont	0256	115,098
Elbe	0295	287
Elin	0273	065,576
Elite	0274	246,348
Eita	0275	037
Emerson	0236	205,241,115,275,065,399,098
Erres	0283	040,065
Europhon	0287	065,544,342
Expert	0909	234
Ferguson	0293	101,363,221,218,033,315,137,266,371,220
Fidelity	0294	244,221,460,400,544,389,391
Finiandia	0296	374,387,236,391
Finlux	0297	132,133,065,374,245,100,104,544,098,115,207,439
Firstline	0298	322,349,244,402,275,037,245
Fisher	0154	132,236,185,245,331,398,572,583
Flint	0910	483
Forgestone	0299	221
Formenti	0301	115,241,244,065,348
Frontech	0308	275,292,191,391,459,476
Fujitsu	0313	234,100
Funai	0179	292,322,207,331
GEC	0319	071,100,549,233,544,065,245,585
Geloso	0327	037,241
Genexxa	0330	246,065,191,440
GoldStar	0056	065,405,318,245,275,037,060,391,137,459
Goodmans	0335	065,064,100,285,037,292,544,207,318,363,399,402,515,527,392,402,371,245,563,399
Gorenje	0336	398
GPM	0321	246
Graetz	0339	191,389,585

Granada	0340	387,391,544,229,072,065,236,174,245,073,367
Grandin	0342	310
Grundig	0345	563,582,515,098,233,219,223
Hanseatic	0353	065,389,572,348,456
Hantarex	0354	544
Harwood	0361	285,037,065,060,440
HCM	0347	037,310,440
Hifivox	0911	596
Hinari	0365	037,064,065,207,246,263,515,383,392
Hisawa	0368	310,428,483
Hitachi	0145	253,384,377,173,606,591,509,065,071,072,064,060, 133,137,224,226,245,255,191,334,391,549,576,585
Huanyu	0912	244,402
Hypson	0374	065,292,310
ICE	0378	245,292,399
ICeS	0913	246
Imperial	0387	065,275,398,112,446,398,498
Indesit	0388	339
Indiana	0914	065
Ingelen	0915	191,585
Innohit	0916	100,544
Interbuy	0393	096
Interfunk	0394	065,191, 275, 389, 540, 585, 596
Intervision	0397	245,065,096,130,292
Isukai	0398	246
ITS	0383	399
ITT	0384	576,191,389,549,572,585
JVC	0053	681,081,122,399,221,218,220,064
Kaisui	0409	246,310,065,244,245,037
Kapsch	0917	234,191,585
Kathrein	0411	584
Kendo	0414	065,263,390
Kingsley	0418	244
Kneissel	0421	287,463
Korpel	0423	065
Korting	0424	115
Koyoda	0918	037
Leyco	0434	292,065,100,322
Liesenk & Tter	0919	065
LG	n/a	0206, 1206, 1293, 0851, 0857, 1665, 1174, 1176, 0065, 0244, 0405, 0318, 0037, 0398, 0191, 0459 0245, 0584,0137, 1219, 1280,0634 Also see Goldstar above (LG=Lucky Goldstar)
Lloytron	0441	060
Loewe	0442	540,115,103,065
Luma	0447	234,391
Luxor	0452	222,391,377,384,389
Magnadyne	0461	115,130,275,544,572
Magnafon	0462	544,241,104,130,342
Manesth	0467	065,263,245,292,348
Marantz	0128	065,584
Marelli	0471	115
Mark	0472	065
Matsui	0477	263,205,037,383,471,039,100, 065,515,239,245,382,322,461,300,

		607,544,399,461,063,208,219, 223,297,498,391,459,572,288,477
McMichael	0481	071
Mediator	0483	065,040,584
MElectronic	0453	374,065,137,133,132,402,037,245,096,508,191,315
Memorex	0037	037
Memphis	0489	365
Metz	0491	115,241,303,395,416,563
Minerva	0494	515,563,582,098
Minoka	0921	397,387,412
Minstral	0922	221
Minstral Electronics	0923	221
Mitsubishi	0150	136,178,382,064,221,065,061,540,115,563
Mivar	0500	320,544,244,318,319
Motion	0503	104
MTC	0185	377,540
Multitech	0508	391,037,244,130,104
National	0521	477,242
Neckermann	0524	065,219,398,584,582,115,241,377,391,533,
NEI	0514	065,365,459
Nesco	0525	207
Nicam	0924	572
Nikkai	0528	060,064,037,245,063,065, 100,244,246,292,365,104,130
Noblisko	0535	104,130
Nogomatic	0925	596
Nokia	0536	389,508,576
Nordmende	0537	137,315,427,224,371,226,241,327,339,596
Oceanic	0540	243,191,389
Onwa	0544	461
Orion	0549	322,383,263,205,039,065,053, 205,348,349,392,544,572,054
Osaki	0550	100,440,300,245,060,285,246,292,297,402
Oso	0551	246
Osume	0552	060,100,185
Otake	0553	345
OttoVersand	0554	038,064,533,065,219,241,245, 348,371,377,540,563,582,584
Palladium	0560	398,391,446
Panama	0562	037,245,292
Panasonic	0051	678,254,278,154,242,241,368,128,191,368,395,585
PatheCinema	0567	191,266,244,241,348
PatheMarconi	0568	233,241,224,226,361,596
Pausa	0569	037
Perdio	0572	065,191,297,348
Phase	0926	060
Philco	0030	115,112,102,104,241,275
Philips	0081	584,065,040,041,582,221,115,071,351,402
Phoenix	0574	348,115,297
Phonola	0575	065,584,040,041,115
Pioneer	0166	137,191,065,315
Prandoni Prince	0927	544
Profex	0590	037,389,104,391
Proline	0592	349,100,054,065,040

Protech	0595	065,245,037,275,377,130,292,365,446,459
Pye	0600	584,065,040,041
Quelle	0604	065,038,039,533,540,563,572,582,582,098, 102,112,228,241,280,334,355,356,389
Questa	0863	060,064
Radiola	0611	065,584,040,351
Radiomarelli	0612	115,229,544
Rank Arena	0928	064
RBM	0606	098
Rediffusion	0617	229,389
Revox	0621	065,398
Rex	0622	234,191,287,292
RFT	0608	115,456
R-Line	0605	065
Roadstar	0625	037,292,246,446
Saba	0645	315,241,103,115,191,137, 544,371,224,226,327,363,233,585,596
Saccs	0929	266
Saikou	0648	285
Saisho	0649	039,205,263,544,037,061,288,239,292,382,459,572,245
Salora	0651	391,576,389,191,222,377,384,387,389
Sambers	0652	241,544,104,130,342
Samsung	0060	065,584,037,245,476,398,516,292,318,037
Sandra	0654	244
Sanyo	0159	236,073,100,064,174,185,367,039,245,246,398,241
Saville	0662	051
SBR	0635	065,584,040,041,071,221
Schaub Lorenz	0664	389,585
Schneider	0665	065,040,331,572,422,364,351,380,245,246,275,399,041
SEG	0636	245,292,064,104
SEI	0637	115,130,038,205,241,322
Sei-Sinudyne	0930	038,544,572
Seleco	0672	234,191,287,390,439
Sentra	0674	063,246,037
Sharp	0093	121,064,065
Shorai	0677	322
Siarem	0679	544,191,115,130,241
Siemens	0680	219,563,582,228,223,329,241,355,356,185,065
Silver	0864	064,389,207
Singer	0688	115
Sinudyne	0689	205,115,263,130,241,322
Skantic	0690	384
Solavox	0695	191,100,576,060
Sonitron	0698	236,398,367
Sonoko	0699	037,065
Sonolor	0931	236,191,243
Sontec	0700	065,398
Sony	0000	533,038,039,064
Soundwave	0702	446,065
Standard	0707	246,037,245
Stern	0719	234,287,191
Sunkai	0721	322,383,349,054
Susumu	0729	246,363
Sysline	0932	065

Tandy	0741	246,100,245,191
Tashiko	0745	191,064,387,245,060,391,285,174,071,244
Tatung	0049	065,100,544,300,277,245,272,077
Tec	0746	245,275
Technema	0933	348
Technics	0250	278,678
TechnolAce	0934	207
Teleavia	0755	137,233,361,371,518,596
Telefunken	0757	137,594,499,102,112,129,363,280, 290,334,101,371,241,033,505,526,596
Telemeister	0760	348,065
Teletech	0762	037,065
Teleton	0763	234,245,377,391
Tensai	0767	132,246,065,322,345,348
Textet	0935	244,246,037,402
Thomson	0771	363,315,427,137,361,224,226,327,371,065,518,596,377,
Thorn	0772	101,221,220,218,527,065,521, 402,540,063,100,102,112,132,533,563,581
Thorn- Ferguson	0936	371
Tomashi	0774	310
Toshiba	0156	536,581,063,271,098
Triumph	0786	271,205,544
Uher	0792	234,348,331
Ultra	0793	220
Ultravox	0794	115,130
Universum	0802	374,133,563,520,398,065,132,292,449
Vestel	0808	065
Videosat	0937	275
Videotechnic	0938	245
Videoton	0939	459
Vision	0941	065,348
Visorex	0818	460
Voxson	0820	115,191
Waltham	0821	245,384
Watson	0822	065,348
Watt Radio	0823	130,342,572
Wega	0825	064,115
White Westinghouse	0830	348,244,065
Yoko	0840	292,065,245,459
Zanussi	0843	234,391,245